



perma FUTURA - Quick Start Guide

1. Predefine installation / Select lubricant, discharge period + connecting parts

Examples: Bearing lubrication

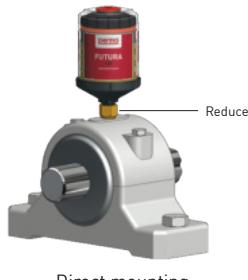

Direct mounting

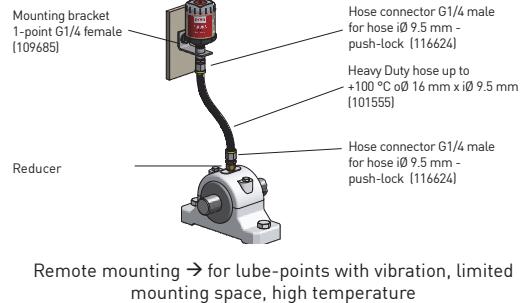

Select a suitable lubricant for perma FUTURA

→ e. g. perma MULTI LC 150-1 (SF01)




Select activator screw

→ e. g. with perma SELECT Software




[refer to our product catalog for details]


2. Prepare lube-point

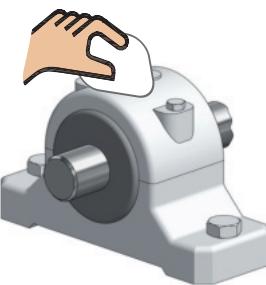


Clean lube-point

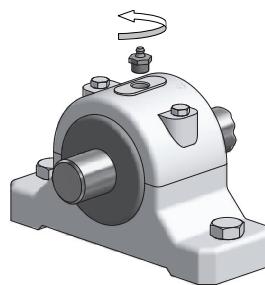


Remove grease fitting

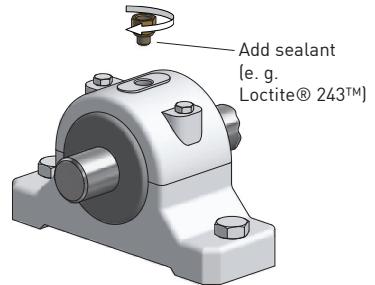


Add sealant (e. g. Loctite® 243™)

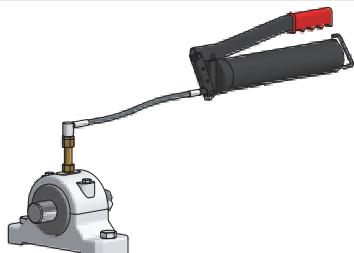

For direct mounting:
Prefill lube-point and any connecting parts
(use the same grease that is contained in the lubrication system)

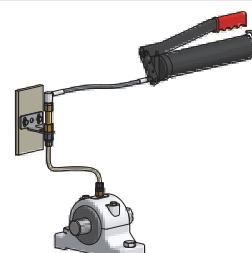

For remote mounting:
Prefill lube-point and any grease lines / connections
(use the same grease that is contained in the lubrication system)

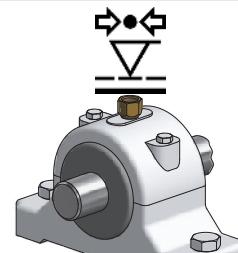

Pressure check: Lube-point / all connecting parts
(refer to perma FUTURA installation guide for details)

3. Activation / Installation of lubrication system

